

# How to change the HERA H7 handguard brackets for HOWA 1500 SA

Needed Tools:

Hammer

7mm Punch

Allen Key 3mm


Hex Key 4mm

1. Remove your action as usual
2. Push out the Pillars with the hammer and the 7mm pun





3. Remove the pillars from top

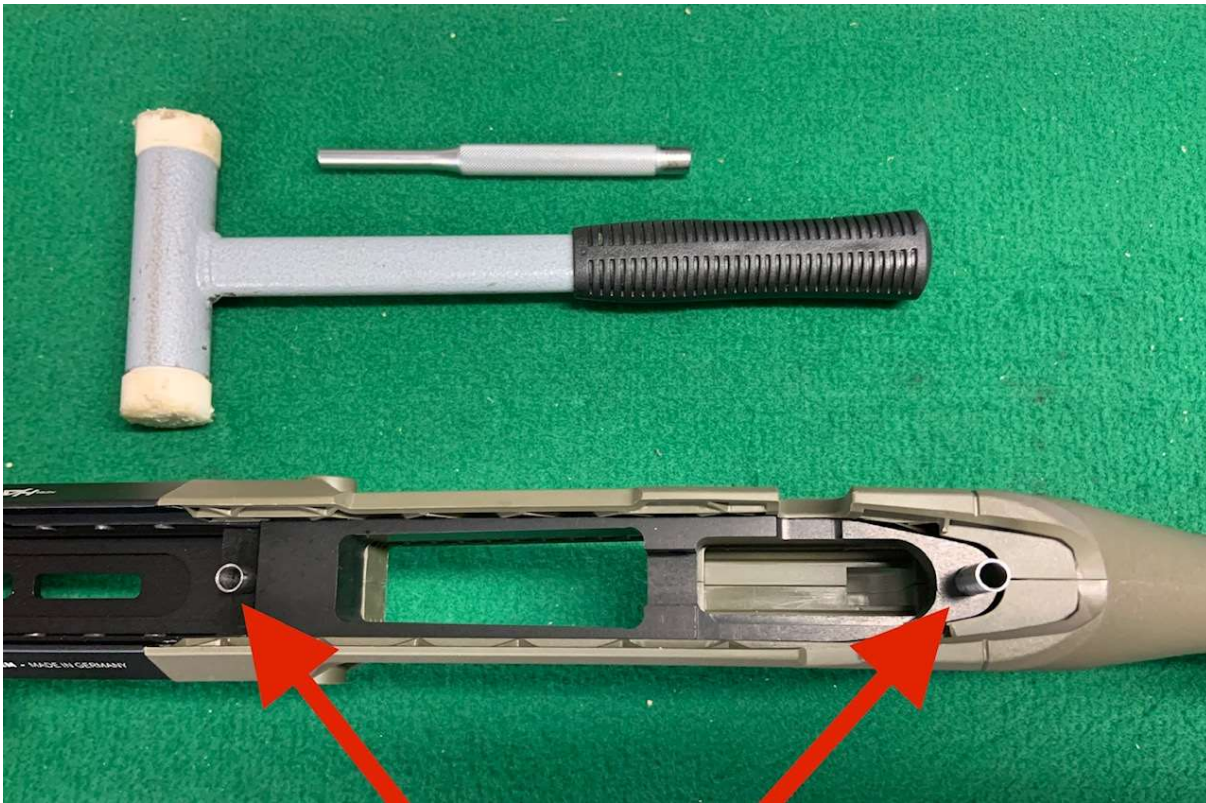

4. Remove the 2 marked screws with a 3mm and 4mm allen key on both sides of the stock.






5. Push out the handguard together with the alloy bedding block and remove the 3 marked screws with a 4mm allen key on both sides of the handguard.



6. Remove the marked screw with a 3mm allen key



7. Remove the brackets and change them against new ones

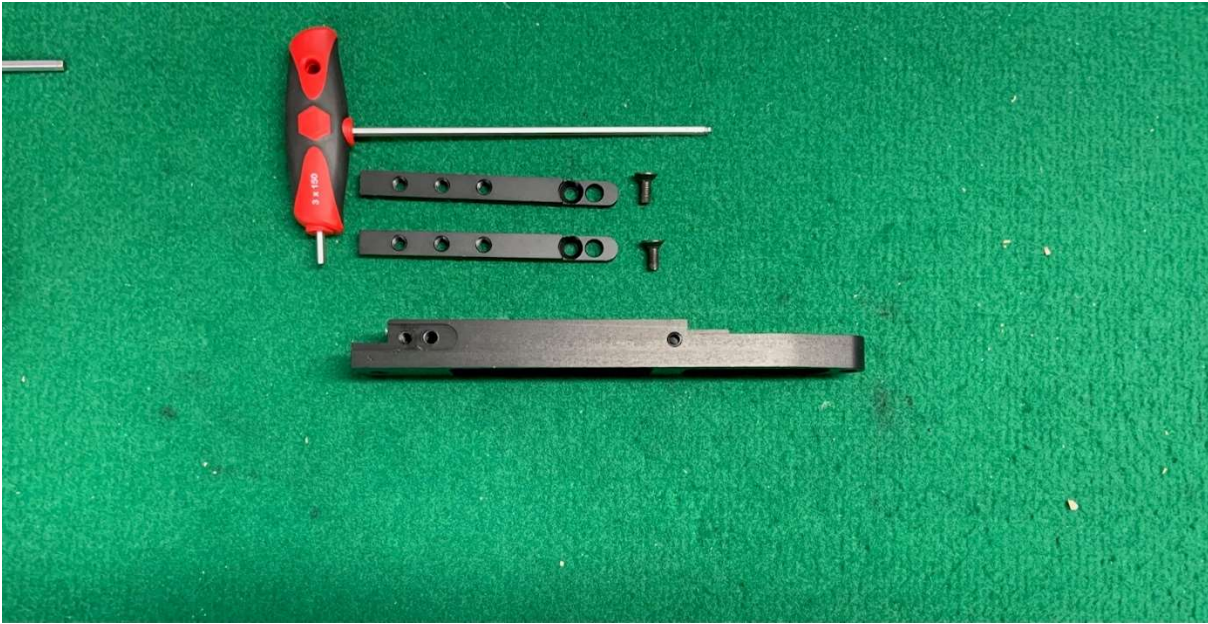

8. Reassemble all parts in the opposite direction

9. Finished!